


NOZZLE INSTALLATION

PIPE INSTALLATION

BRIDLE INSTALLATION

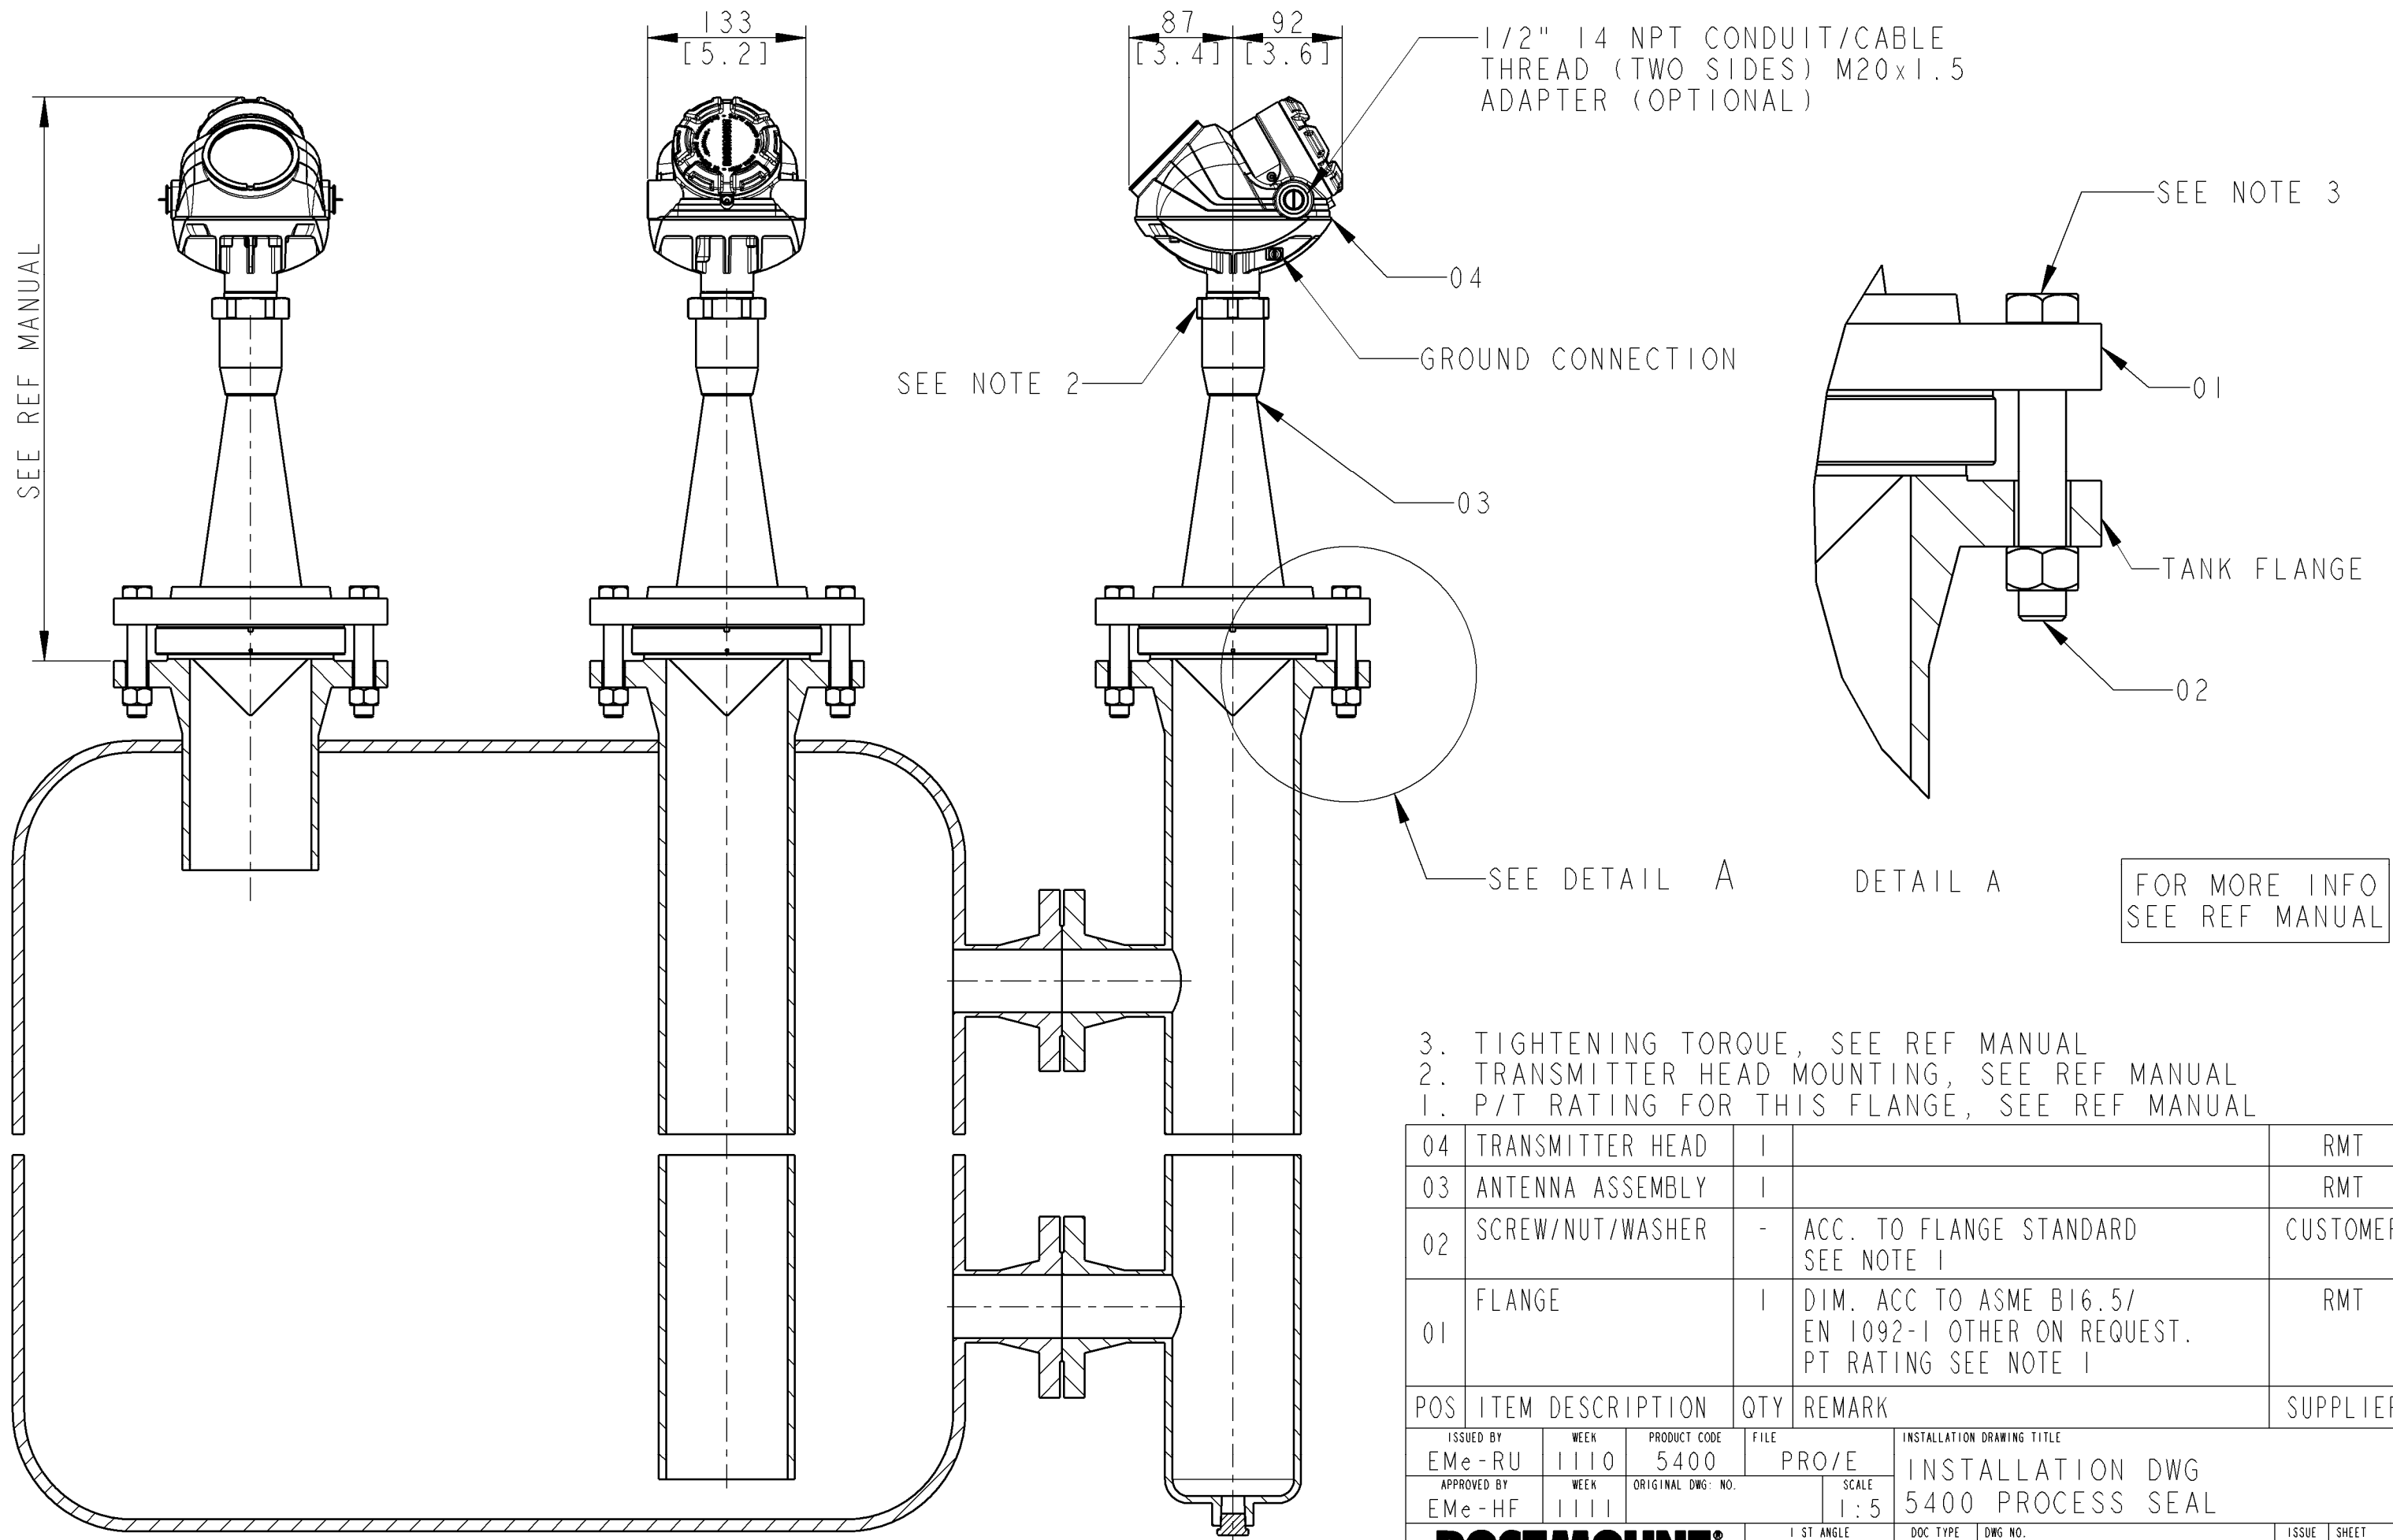

- 3. TIGHTENING TORQUE, SEE REF MANUAL
- 2. TRANSMITTER HEAD MOUNTING, SEE REF MANUAL
- 1. P/T RATING FOR THIS FLANGE, SEE REF MANUAL

04	TRANSMITTER HEAD	1		RMT
03	ANTENNA ASSEMBLY	1		RMT
02	SCREW/NUT/WASHER	-	ACC. TO FLANGE STANDARD SEE NOTE 1	CUSTOMER
01	FLANGE	1	DIM. ACC TO ASME B16.5/ EN 1092-1 OTHER ON REQUEST. PT RATING SEE NOTE 1	RMT
POS	ITEM DESCRIPTION	QTY	REMARK	SUPPLIER

ISSUED BY	WEEK	PRODUCT CODE	FILE	INSTALLATION DRAWING TITLE
EMe - RU	1110	5400	PRO/E	INSTALLATION DWG 5400 PROCESS SEAL
APPROVED BY	WEEK	ORIGINAL DWG: NO.	SCALE	
EMe - HF	1111		1:5	
<b>ROSEMOUNT</b>		1 ST ANGLE	DOC TYPE	DWG NO.
			2	9240031-969
ISSUE	SHEET			
01	1/1			

THE COPYRIGHT/OWNERSHIP OF THIS DOCUMENT IS AND WILL REMAIN OURS. THE DOCUMENT MUST NOT BE USED WITHOUT OUR AUTHORIZATION OR BROUGHT TO THE KNOWLEDGE OF A THIRD PARTY. CONTRAVENTION WILL BE PROSECUTED. ROSEMOUNT TANK RADAR AB, SWEDEN.